


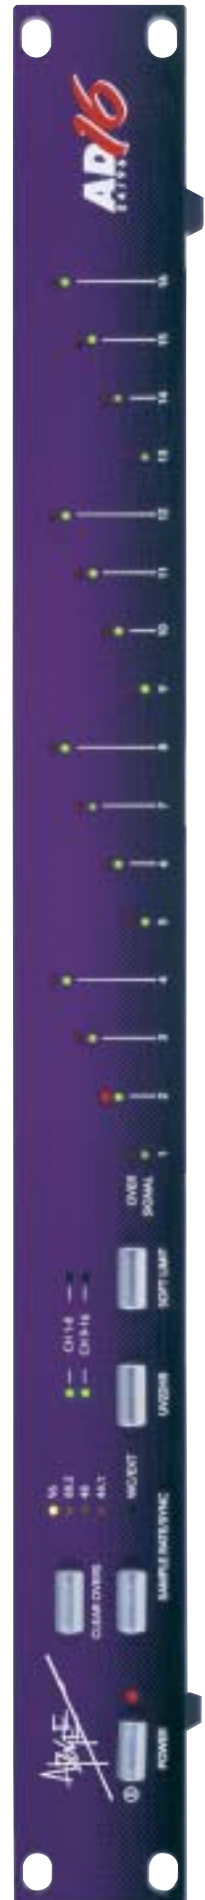

AD-16

24-bit 16-channel
A/D Converter

Owner's Manual
v1.1 – April 2002



Apogee AD-16 User's Guide

Written by David Kimm and Julio Alvarez.

Production, editing and running round in circles by Richard Elen, with valuable assistance from Seth Reinhart.

Apogee is a Registered Trademark of Apogee Electronics Corporation. All other trademarks are property of their respective holders.

Technology within the AD-16 may be covered by one or more patents that are the property of Apogee Electronics Corporation. Infringement of said patents or any relevant other naughty things may result in one or more uncomfortable and potentially financially-damaging encounters with members of the legal profession.

Registered User Customer Support:

For customer support, please call (310) 915-1000 and ask for Tech Support, or email support@apogeedigital.com.

Technical Support is available to registered owners.

Features and specifications subject to change without notice.

© 2002 APOGEE ELECTRONICS CORPORATION

3145 Donald Douglas Loop South

Santa Monica,

California 90405-3210 USA

Tel: +1 310/915-1000

Fax: +1 310/391-6262

Email: info@apogeedigital.com

Web: <http://www.apogeedigital.com/>

This manual is copyright ©2002 by APOGEE ELECTRONICS CORPORATION. All rights reserved. Under copyright laws, this manual may not be duplicated in whole or in part without the written consent of Apogee. Just drop us an email and tell us why you need to copy it.



AD-16

24-bit 16-channel
A/D Converter

Owner's Manual

v1.1 – April 2002

Warnings

CAUTION: To reduce the risk of electrical shock, do not remove the cover. No user serviceable parts inside; refer servicing to qualified personnel. To change the operating voltage or change the firmware EPROM, it is necessary to remove the cover of the unit. As a result, such operations must be carried out only by technically-qualified personnel.

WARNING: To reduce the risk of fire or electrical shock, do not expose this appliance to rain or moisture.



This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure—voltage that may be sufficient to constitute a risk of shock. Operations indicated with this symbol should be carried out only by technically-qualified personnel.



This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Read the manual.

Environmental warnings

- Never touch the AC plug with wet hands.
- Do not use this unit in damp areas or near water.
- Avoid damaging the AC plug or cord and potentially causing a shock hazard.
- If liquids spill into or onto the DA-16, disconnect the power and return to your dealer for servicing.
- This unit should only be connected to an AC power supply of the correct voltage. Check with your dealer if in doubt.
- Precautions should be taken so that the grounding or polarization of the AC power is not defeated.
- Unplug the AC cord when the unit is unused for long periods of time.
- This unit should only be cleaned as recommended by the manufacturer, or damage to the finish may result.
- To avoid potential damage to your unit, only use in areas where proper ventilation and moderate temperatures are assured.

Power warning



AC voltage ratings for electrical power vary from area to area. Severe damage to your unit is possible if your DA-16 is configured incorrectly for your local power. If in doubt, consult an Apogee dealer. A label adjacent to the power connector indicates the voltage to which the unit was set on leaving the factory.



Instructions for changing the power input voltage are provided. We strongly advise you to check that the voltage label remains current and is updated if the input voltage setting is changed.

FCC warning



This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to take whatever measures may be required to correct the interference at his own expense.

Copyright Notice

The Apogee DA-16 is a computer-based device, and as such contains and uses software in ROMs. This software, and all related documentation, including this Owner's Manual, contain proprietary information which is protected by copyright laws. All rights are reserved. No part of the software and its related documentation may be copied, transferred, or modified. You may not modify, adapt, translate, lease, distribute, resell for profit or create derivative works based on the software and its related documentation or any part thereof without prior written consent from Apogee Electronics Corporation, U.S.A.

Registration and Warranty Information

Be sure to register your AD-16, either by filling in the enclosed Registration Card or by completing the on-line registration form at our Web site: <http://www.apogeedigital.com/register.html>. If you do so, Apogee can contact you with any update information. As enhancements and upgrades are developed, you will be contacted at the registration address. Firmware updates are free for the first year of ownership unless otherwise stated. Please address any inquiries to your dealer or directly to Apogee at:

APOGEE ELECTRONICS CORPORATION, 3145 Donald Douglas Loop South, Santa Monica, CA 90405, USA.
TEL: (310) 915-1000, FAX: (310) 391-6262
email: support@apogeedigital.com. Web: <http://www.apogeedigital.com/>

APOGEE ELECTRONICS CORPORATION warrants this product to be free of defects in material and manufacture under normal use for a period of 12 months. The term of this warranty begins on the date of sale to the purchaser. Units returned for warranty repair to Apogee or an authorized Apogee warranty repair facility will be repaired or replaced at the manufacturer's option, free of charge. **All units returned to Apogee or an authorized Apogee repair facility must be prepaid, insured and properly packaged.** Apogee reserves the right to change or improve design at any time without prior notice. Design changes are not implemented retrospectively, and the incorporation of design changes into future units does not imply the availability of an upgrade to existing units.

This warranty is void if Apogee determines, in its sole business judgment, the defect to be the result of abuse, neglect, alteration or attempted repair by unauthorized personnel.

The warranties set forth above are in lieu of all other warranties, expressed or implied, and Apogee specifically disclaims any and all implied warranty of merchantability or of fitness for a particular purpose. The buyer acknowledges and agrees that in no event shall the company be held liable for any special, indirect, incidental or consequential damages, or for injury, loss or damage sustained by any person or property, that may result from this product failing to operate correctly at any time.

USA: Some states do not allow for the exclusion or limitation of implied warranties or liability for incidental or consequential damage, so the above exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Service Information

If the AD-16 is kept in a clean environment free of **excess dust, moisture and heat**, it will give years of trouble-free service.

The AD-16 contains no user-serviceable components: refer to qualified service personnel for repair or upgrade. Your warranty will be voided if you tamper with the internal components. If you have any questions with regard to the above, please contact Apogee.

In the event your AD-16 needs to be upgraded or repaired, it is necessary to contact Apogee prior to shipping, and a Return Materials Authorization (RMA) number will be assigned. This number will serve as a reference for you and helps facilitate and expedite the return process. *Apogee requires that shipments be pre-paid and insured* — unless otherwise authorized in advance. **IMPORTANT: Any shipment that is not pre-paid or is sent without an RMA number will not be accepted.**

Declarations of Conformity

Declaration of Conformity—FCC

Apogee AD-16

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Re-orient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a different circuit from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

NOTE: The use of non-shielded cable with this equipment is prohibited.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Apogee Electronics Corporation, 3145 Donald Douglas Loop South, Santa Monica, CA 90405.
Betty Bennett, CEO.

Industry Canada Notice

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Declaration of Conformity – CE

Apogee Electronics Corporation hereby declares that the product, the **AD-16**, to which this declaration relates, is in material conformity with the following standards or other normative documents:

- EN50081-1/EN55022; 1995
- EN50082-1/IEC 801-2, 3, 4; 1992

following the provisions of:

- 73/23/EEC – Low Voltage Directive
- 89/336/EEC – EMC Directive

Declaration of Conformity – Japan

Apogee Electronics Corporation hereby declares that the **AD-16**, to which this declaration relates, is in material conformity with the VCCI Class A standard.

Declaration of Conformity – Australia

Apogee Electronics Corporation hereby declares that the **AD-16** is in material conformity with AN/NZS standard requirements.

CAUTION

Any changes or modifications not expressly approved by APOGEE ELECTRONICS CORPORATION could void your authority to operate this equipment under the FCC rules.

OWNER'S RECORD

The serial number is located on the rear panel of the unit. We suggest you record the serial number in the space provided below. Refer to it whenever you call an authorized Apogee Electronics repair facility or the manufacturer. Please be sure to return your completed warranty card immediately!

AD-16 Serial No. _____ Purchase Date _____

Factory Firmware Revision _____

Dealer _____

Phone _____

Address _____

User's Installation Notes

Space left blank for user tracking of factory modifications, option installations, software upgrades, manual revisions/ addenda, internal settings.

About This Manual

This manual was written to help you to use this product to its fullest potential. Although the AD-16 is inherently simple to operate, it may contain features that may not be obvious from the front panel. Therefore, reading this manual is recommended to unlock the full value of this product.

This manual was also written to prevent misuse of this product. Should you run into a problem when operating the AD-16, the solution is hopefully contained in the following pages. We expect that this manual will serve as the basis of your diagnosis of problems encountered and hope it will be used as such prior to any calls to technical support at Apogee.

Remember — before calling technical support at Apogee, you should register this product either by sending in the registration card or by registering on the Apogee Web site (<http://www.apogeedigital.com>). The technical support specialist will refer to the manual during your call and will expect that you have read it and understand the product to some degree.

If you have any suggestions on how to improve this owner's manual, please forward them to us at support@apogeedigital.com or fax them to +1-310-391-6262.

Table of Contents

Warnings	4
Registration & Warranty Information	5
Service Information	5
Declarations of Conformity	6
Owner's record	7
User's Installation Notes	8
About This Manual	8
The Manual	
Table of Contents	9
Introduction	11
Controls, Connections and Operation	11
Power	
Sample Rate/Sync	
Over Clear	
Resolution	
SoftLimit	
Channel 1–16 Level LEDs	
Channel 1–16 Over LEDs	
The Rear Panel	12
DIP switches	
Word Clock In	
Word Clock Out	
ADAT Optical Outputs	
TDIF Connectors	
AES Digital Pinout.....	13
Analog Input Pinout	
Level Trim.....	14
Application Notes	14
Tracking	
Mixing	
Mastering	
Calibration	15
Procedure	
Restoring Default Values	
Internal Adjustments	15
Voltage Selector	
Fuses	
AD-16 Specifications	16

See the Apogee web site – www.apogeedigital.com – for additional technical notes and documentation.

This page intentionally left blank.

Introduction

Congratulations! You have just purchased a powerful and flexible multichannel analog-to-digital converter that renders an accurate soundstage and pristine audio quality in the tradition of Apogee's award-winning converters. While the AD-16 is simple in operation, you should take a moment to read over this manual in order to get acquainted with the AD-16's features and operations.

Designed for the latest hard-disk recording systems, the AD-16 offers 16 channels of Apogee conversion quality at an exceptionally affordable price, handling 24-bit A/D conversion at sample rates up to 96kHz. The balanced analog inputs can interface to a wide variety of input levels from -10dBv to $+4\text{dBu}$ with additional adjustments for digital headroom levels. Apogee's SoftLimit analog processing can be selected for either bank of eight channels as well as the renowned UV22HR word length reduction technology.

The converters sync to internal clocks or to an external Word Clock through the use of Apogee low jitter clock technology. Digital outputs are ADAT lightpipe as standard and can be configured to output Sonorus S/MUX protocol for sample-splitting high-resolution signals into optical interfaces. AES/EBU or TDIF outputs are also available as an option.

The Front Panel



POWER

On the left-hand side of the front-panel is the POWER button. Press once to power the unit on and press again to power off the unit.

SAMPLE RATE/SYNC

To the right of the power button is the Sample Rate/Sync button. This sets the sample rate (sampling frequency) for the digital and word clock outputs to 44.1, 48, 88.2 or 96kHz referenced to the internal clock, or allows the unit to be synchronized to an external word clock input. LED indicators to the right of the button indicate the current setting.

OVER CLR

This button, situated above the Sample Rate/Sync button, clears the sixteen channel over indicators when they are selected to infinite hold with the rear panel DIP switch.

UV22HR

Selects the digital word length (also referred to as bit rate or resolution) for the digital outputs. Note that the AD-16 always converts analog to digital at 24-bit resolution. To output a 16-bit or 20-bit signal, in 44.1 or 48kHz the UV22HR process can be applied by pressing the UV22HR button. This will cycle through the selection of channels 1-8, channels 9-16, or both, and then back to all channels off. 16 or 20-bit UV22HR is selected by rear panel DIP switch #1.

In high density modes (88.2 or 96kHz sampling), UV22HR is not necessary. If you attempt to activate it, the UV22HR LEDs will remain dark and the 88.2 and 96kHz sample rate LEDs will flash.

SOFTLIMIT

The SoftLimit process can be applied by pressing the momentary **SoftLimit** button. Pressing the button repeatedly will cycle through the selection of channels 1-8, channels 9-16, or both, and then back to all channels off.


Channel 1-16 Level LEDs

During normal operation, the brightness of these green audio LEDs varies in proportion to the analog input signal level, to indicate the presence of audio (i.e., they illuminate brighter for "louder" incoming analog signals)

Channel 1-16 OVER LEDs

These LEDs will illuminate when a digital OVER is sensed at the digital output for the respective channel. These can be set to automatically clear after 2 seconds or infinite hold with rear panel DIP switch #2. The number of consecutive samples containing "all ones" that constitutes an Over is determined by the setting of DIP Switches 3 and 4. Pressing the OVER CLR button on the left side of the front panel will clear the OVER LEDs.

The Rear Panel

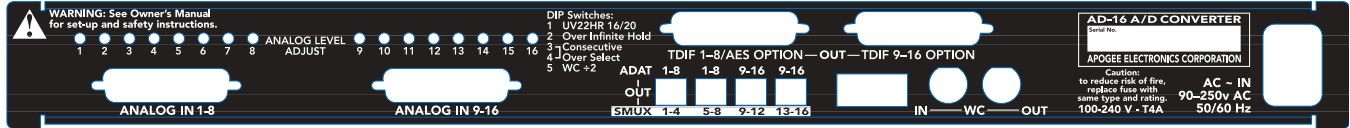

DIP Switches

The rear panel DIP switches allow a number of system parameters to be set. The switches operate as follows:

DIP Switch	Function	ON (UP)	OFF (DOWN)
1	UV22HR word length	20-bit	16-bit
2	Over infinite hold	ON	OFF
3,4	Consecutive Over setting – see below		
5	Word Clock output at 88.2/96	half sample rate	sample rate
6	Sample Freq (fs) locked to ext WC	fs = 2x WC In freq	fs = WC In freq
7, 8	Currently unused		

DIP switches number 3 and 4 work together to determine the number of consecutive full scale samples (0dBFS) required to illuminate the 'over' LEDs (the default setting is both DIPs to DOWN).

SW 3	SW 4	Threshold
UP	UP	1
UP	DOWN	2
DOWN	UP	3
DOWN	DOWN	4

WC IN/OUT

The BNC Word Clock IN connector accepts standard Word Clock signals, allowing the AD-16 to be synchronized to an external source when the front panel SAMPLE RATE/SYNC button is set to WC/EXT. DIP Switch 6 allows the AD-16's sample rate to be the same as or twice the rate of the Word Clock input. The WC OUT BNC connector outputs standard Word Clock signals at a sample rate determined by the SAMPLE RATE/SYNC button on the front panel. To accommodate systems that require it, DIP Switch 5 can be used to set this output to the current sample rate or at *half* the sample rate, when the system sample rate is 88.2 or 96 kHz. See above.

ADAT Optical Outputs


The ADAT outputs support 16 channels at either 44.1/48 kHz via two transmitter outputs, or 88.2/96 kHz via all four transmitter outputs using the S/MUX protocol. S/MUX is essentially "double-wide mode for ADAT", where a pair of channels at (for example) 48 kHz will carry one 96 kHz signal. A single 8-channel input then becomes 4 channels in S/MUX mode. When looking at the rear panel, the following illustrates the connection scheme for either mode. Each box represents one of the four connectors.

ADAT "Normal" Mode	Channels 1-8	Channels 1-8	Channels 9-16	Channels 9-16
S/MUX Mode	Channels 1-4	Channels 5-8	Channels 9-12	Channels 13-16

TDIF Connectors

The two TDIF DB25 I/O connectors use only the *output* half of a standard TDIF cable. Each cable carries eight channels of audio per bank.

AES Digital Pinout

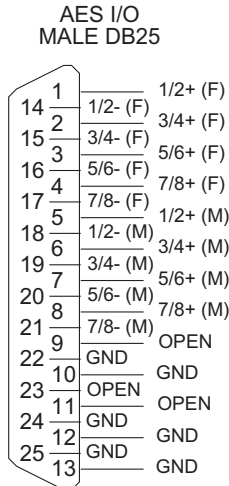

The AES output is delivered through a single, female DB25 connector. The pinout is similar to the "Yamaha" DB25 specification, except that all channel pairs are configured as outputs. The pinout is as follows:

Pin Function	Pin Function
1 Channels 1/2 (Hot)	14 Channels 1/2 (Cold)
2 Channels 3/4 (Hot)	15 Channels 3/4 (Cold)
3 Channels 5/6 (Hot)	16 Channels 5/6 (Cold)
4 Channels 7/8 (Hot)	17 Channels 7/8 (Cold)
5 Channels 9/10 (Hot)	18 Channels 9/10 (Cold)
6 Channels 11/12 (Hot)	19 Channels 11/12 (Cold)
7 Channels 13/14 (Hot)	20 Channels 13/14 (Cold)
8 Channels 15/16 (Hot)	21 Channels 15/16 (Cold)
No Connection: 9, 11, and 23. Ground: 10, 12, 13, 22, 24, 25	


Analog Input Pinout

The pinout for the analog input connectors follows the configuration utilized by Tascam for their DA-88 and other products, thus allowing a standard connection cable to be used. Be sure to specify the INPUT version (with XLR female connectors on the ends). Alternatively, you can use the pinout diagram below to construct your own. The pinout is as follows:

Function	+Pin (Hot)	-Pin (Cold)
Channel 1/9	24	12
Channel 2/10	10	23
Channel 3/11	21	9
Channel 4/12	7	20
Channel 5/13	18	6
Channel 6/14	4	17
Channel 7/15	15	3
Channel 8/16	1	14
Ground: 2, 5, 8, 11, 16, 19, 22, 25		

Also see diagram below:

Pin-out for TASCAM DB25 8 Channel Balanced Connector

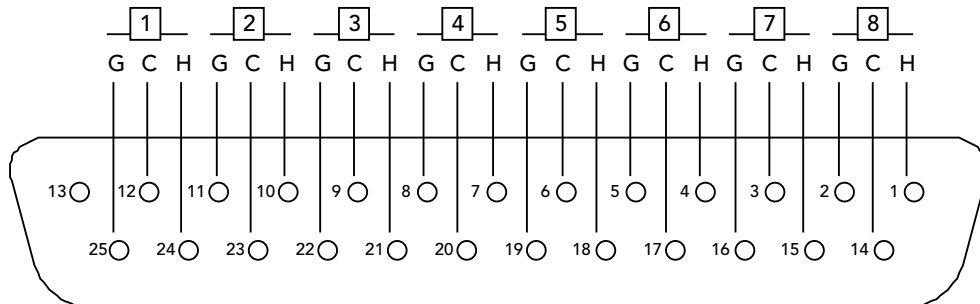

H = HOT
C = COLD
G = GROUND

Level Trim

These multiturn trimmers adjust the level sensitivity of the individual A/D sections. As discussed in the METERS description, digital and analog scales are different. The level trim posts allow you to set the AD-16 to an operating level that is convenient for your particular application.

Application Notes

Tracking

Because of the unpredictable dynamic range of live performance, it's often desirable to have plenty of headroom to capture a performance without risking overs. In this case, you may want to set the AD-16 levels to -20 or -18 dBfs. The SOFT LIMIT function will also prove to be a useful feature in live recording.


Mixing

Levels are usually more controlled during a mix. In this case, the AD-16 levels can be adjusted to -16 or -12 dBfs to lay down the final mix.

Mastering

In the mastering stage, it's often desirable to get the hottest signal on to tape. Hot transients are usually better controlled at this stage. The convert does not need as much headroom, so it can be set to -12 dBfs.

The chart below shows the relationship between dBu and dBFS for the purposes of setting the levels on the AD-16.

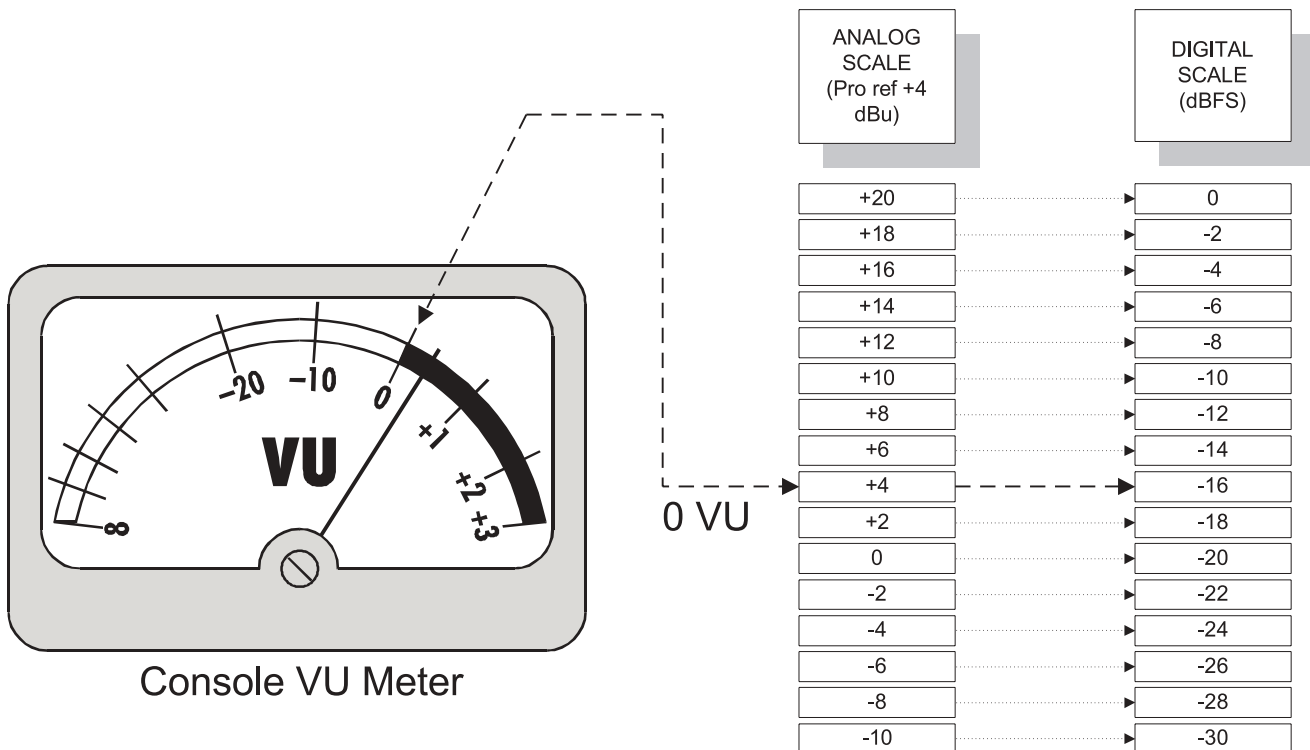

This page intentionally left blank.

AD-16 Specifications

Inputs:	16 analog inputs, balanced Word Clock
Outputs:	Four TosLink interfaces delivering 2 x 8 channels in ADAT mode and 4 x 4 for S/MUX. Optional AES/EBU & TDIF cards Word Clock
Resolution:	24-bit
Sample Rates:	44.1, 48, 88.2, 96 kHz \pm 10%
Relative THD+N (S/(N+D)):	-105 dB @ 1kHz, -0.5 dBFS output
Dynamic Range, -60 dB:	-117 dB A-weighted
Passband Ripple:	0.001 dB
Stopband Attenuation:	110 dB
Interchannel Crosstalk:	\leq -120 dB
Frequency Response:	10 Hz-20 kHz, \pm 0.025 dB
Input Levels, maximum:	24 dBu, 18 dBu and 4 dBV
Clock Jitter:	<22 pSec (ext WC input)
Functionality:	Lock and sample rate indicators. Signal present and "over" indicators per channel. Internal clock (four sample rates) and External (word clock) input. Soft Limit and UV22HR buttons. Power switch & indicator. Rear panel reference level multi-turn trimpots (one per channel).
Connectors:	1 IEC power connector chassis male 4 Toslink optical transmitters for ADAT-S/MUX output 2 BNC for Word Clock input & output 2 DB25-B for analog input, Tascam standard pinout Option cards: 1 DB25-B for AES/EBU, 2 DB25-B for TDIF digital outputs
Case:	1U (1.75 in) high, 19 in rack-mount
Power Supply:	Switch-mode
Input Voltage Range:	100-240 Volt AC 50-60 Hz (Universal)
Power consumption:	~25W

Please register your Apogee products!

**You need to be registered to qualify for Technical Support.
Please be sure to register all the Apogee products you own.**

**You can register either with the registration card provided in this package,
or on-line at:**

<http://www.apogeedigital.com/register.html>

Thanks for your support!

Please read the manual!

**This Apogee product is quite easy to use.
However, there may be features and settings
that are not evident from the front panel.
Please be sure to read the manual thoroughly!**

**If you contact Technical Support, they will assume that you have
read the manual and have a basic operational knowledge of the product.**